FL6OM 3

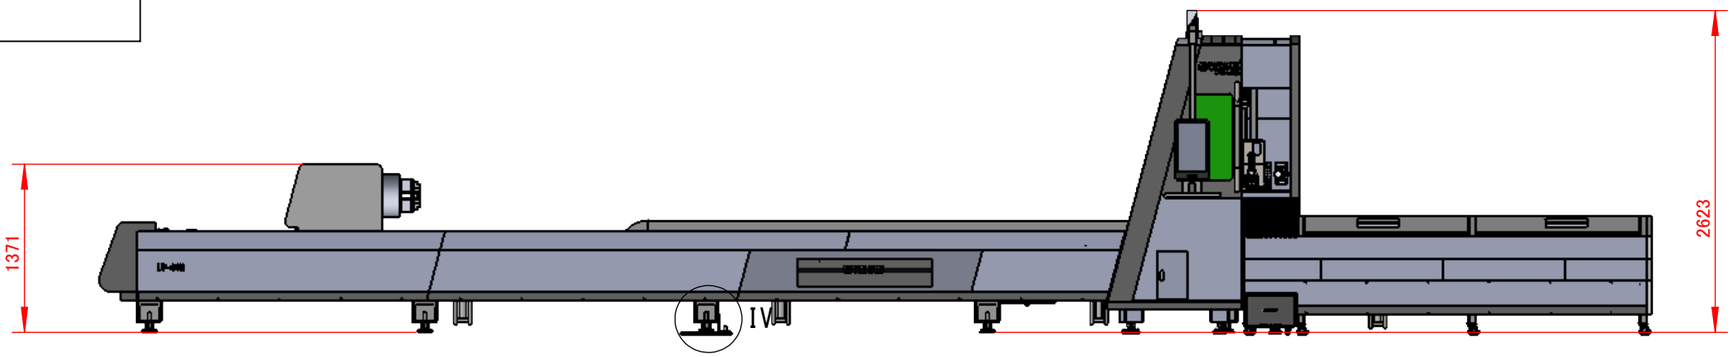

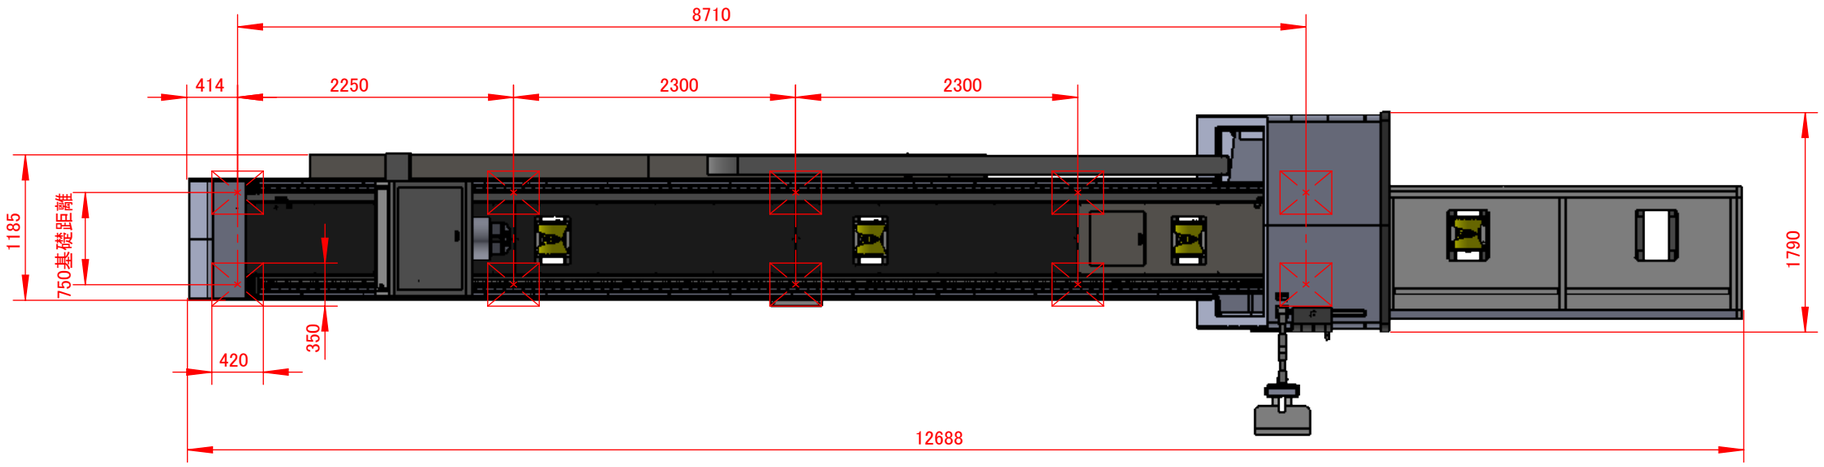

V
1 : 25

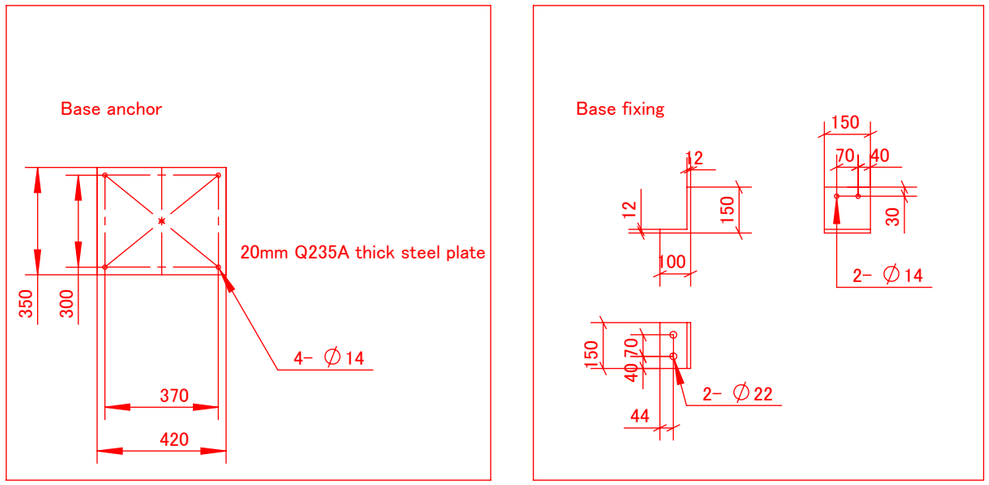

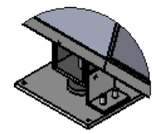

IV
1 : 25

Installation instructions

1、Makeing the base anchor,refer to the picture for size;

2、Fixing the base anchor to cement flooring with expansion bolt,expansion bolt M12*100, NOS：40；

3、After the machine is placed in horizontal level,soldering 20 M20*50 welding screws at the appropriate position on the base anchor,for fixing machine;

4、In theory,it need to pour concrete column(size:420*350*600) for all the ten base anchors, then fix the plate to cement flooring,IF the cement surface is strong enough,can using it as foundation directly.

						組立		Sunmax Laser , Japan
マーク	数	分区	番号変更	署名	年月日	ステージマーク	重量	尺度
設計			標準化		2019/3/15		5446.42	1:200
描画			処理					設置基盤マップ
主管設計			検査					FL6OM 3
			承認			合計	版本	替代

品番

借用(パス)登録

トレース

描画

旧ベースマップ数

ベースマップ数

署名

日付